

MULTI-SPRAYER PARTS

MULTI-SPRAYER DIAGRAM

<u>KEY</u>	<u>PART #</u>	<u>DESCRIPTION</u>
*5	BST-1YSS	SS Female Coupler, 1/8"
6	6590	Brass/Viton Trigger
**	6590-VIKIT	Trigger Valve Repair Kit
7	H14-2MUSBR	Compression & Strain Relief
8	FW-10	Urethane Coiled Spray Hose 10', 1/4 ID
9	SNP-2	Hose Clamp, Nylon
11	N4MEB6	Elbow, Nylon
12	AQ115	115V Motor & Pump
*14	216P-4-2	Brass Reducing Nipple, 1/4"/1/8"
15	11375	Rubber Hose Grommet
16	ARD	Base Plate Retainer Button
17	160011E	Electric On/Off Switch
18	UR33	Urethane Suction Hose, 33", 1/4 ID
19	13862-50	Suction Hose Strainer, 50 mesh
20	18110	Power Cord, 20 Feet
21	SR7W-2	Power Cord Strain Relief
22	2G	2 Gallon Solution Container
23	F17004LG	Female Poly Jug QC
**	M22	Male Poly QC
**	Cap & 90	Cap & 90 Deg. Poly Panel Mount
**	CAPDIP	Male Poly QC, Cap, Dip Tube & Strainer
24	M22004LG	Male Jug QC, Cap and 90 Degree Barb
25	UR12.5	Urethane Dip Tube, 12.5", 1/4 ID
*		Parts #5 and #14 on M2 Model Only
	<u>AQ115</u>	<u>115 Volt Pump Parts</u>
	LHA	Lower Head Assembly, Triangular Diaphragm/CAM
	VHA	Valve Assembly, 3 Inlet and 2 Outlet Valves
	UHA	Black Poly Pump Head

If pump leaks from small triangle on black pump head, replace #UHA.
If pump runs but does not pump, replace VHA and LHA

When reassembling pump, tighten screws very firmly

