



Owner's Manual | Stand Mounting Instructions


Read And Save These Instructions

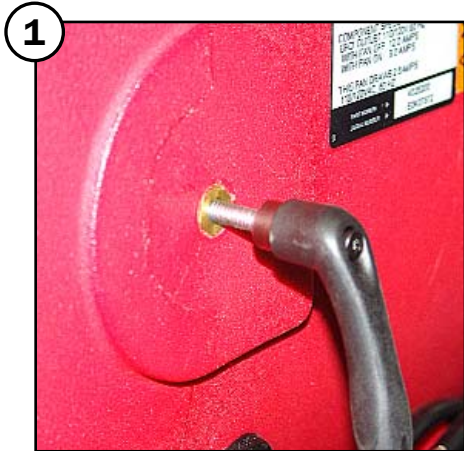

Screw both locking levers into the mounting lugs on either side of the air mover approximately 1/4".

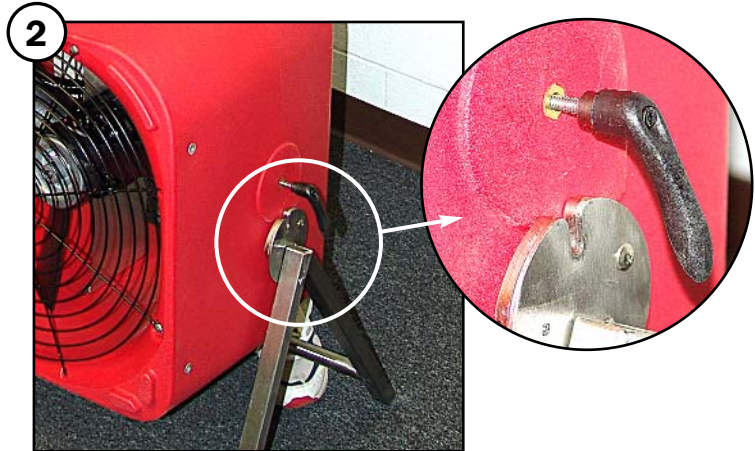

Place the air mover onto the stand by aligning the locking levers with the slots in the stand mounting plates.

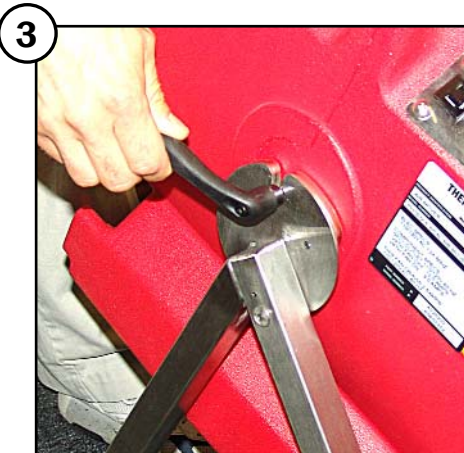

Aim the air mover for desired airflow direction and finger-tighten the locking levers.



Your Axial Air Mover is now ready for use.



2001 S. Stoughton Road
Madison, WI 53708
www.usephoenix.com

Phone 608-222-5301
Toll-Free 1-800-533-7533
sales@usephoenix.com