

# OWNERS MANUAL

## Gale Force/Clean Force Air Mover Stand Mounting Instructions

*Read instructions before use.  
Save these instructions*

### CONTENTS NEEDED:

- Both metal side brackets (Picture 1)
- Both shoulder pins (Picture 2)
- Both nylon spacers (Picture 3)
- 8- 1 $\frac{1}{4}$ " screws (Picture 4)



Picture 1



Picture 2



Picture 3



Picture 4




1

Remove the screws in the nut certs and discard screws.



2

Line up nylon spacer with metal side bracket and using longer screws attach to the air mover.

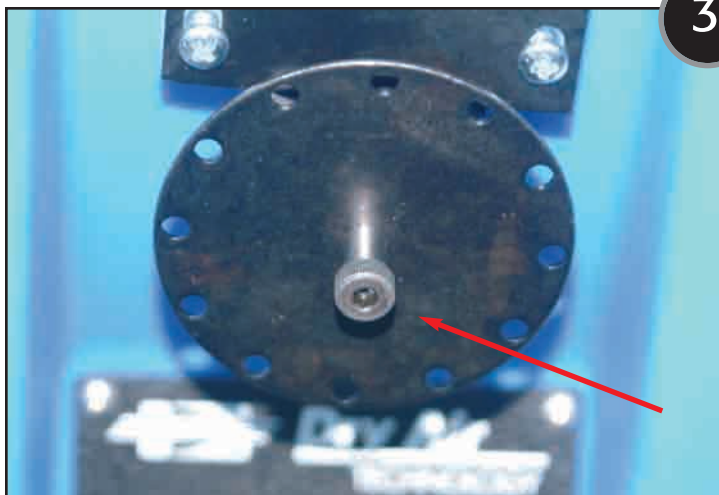

3

Screw the shoulder pins into the center of each bracket.



4

Slide the shoulder pin into the notches on the stand. Aim the air mover to desired position and insert both locking pins through the holes to hold the air mover in position.

# OWNERS MANUAL

## Force 9 Air Mover Stand Mounting Instructions

*Read instructions before use.  
Save these instructions*

### CONTENTS NEEDED:

- Both metal side brackets (Picture 1)
- Both shoulder pins (Picture 2)
- 8- 1/2" screws (Picture 3)




Picture 1



Picture 2




Picture 3

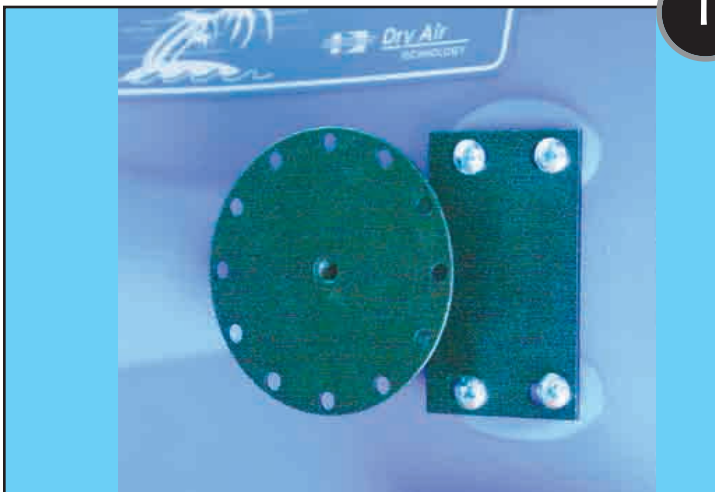

1

With circular part of the side brackets toward the center of the fan, using 1/2" screws attach the brackets to the air mover.

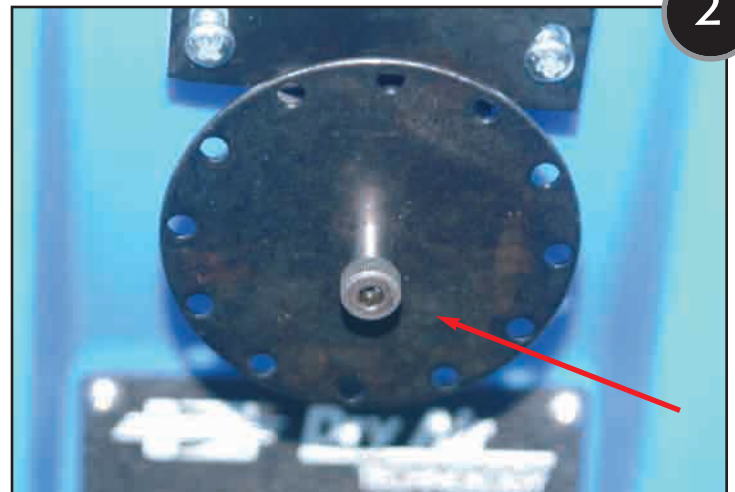

2

Screw both shoulder pins into the center of each bracket.



3

Slide the shoulder pins into the notches on the stand.



4

Aim the air mover to desired direction and insert both locking pins through the holes to hold the air mover in position.