


INSTRUCTIONS


Installation of the PMF Teflon Glides

Installing the new Teflon Glide kit:


1. Remove any existing metal glides on the wand and the front roller if applicable.
2. Take one of the metal glide mounts from the package. Both metal glide mounts are marked front and back. Do not install the Teflon glide on the metal glide mount at this point.
Never hit the Teflon glide with a hammer or other heavy object as this will damage the glide.
3. To install the front metal glide mount (with support pin), rotate the metal glide mount so that the threaded studs point outwards. When installed the rear metal glide mount, the studs will point backwards. Center the metal glide mount on the wand head. Using a rubber mallet, tap the bottom of the metal glide mount so that it begins to slide on to the front of the wand head. Continue to tap the metal glide mount until it is fully seated against the wand head lip.
4. For Mach-15 & Mach-12 Only: Included in your shipment are two small metal clips, one for the right side and one for the left side of the wand head. After installing the metal glide mount, the metal clips can be installed. On the back of the metal clip, there is a rectangular strip. This strip goes between the lips of the wand, when the clip is installed. Push the clip onto the side of the wand by hand. Using a rubber mallet tap the clip on to the head. Repeat this procedure on the other side of the head.
5. Once the metal glide mount and metal clips are seated, the Teflon glide can be installed. Align the Teflon glide with the mounting studs. Press the Teflon glide down until it rests completely against the metal glide mount.
6. Install the 5 stainless steel screws included. Tighten the screws until the Teflon glide is firmly secured. Repeat the procedure for the rear Teflon glide.
7. Once the Teflon glides are installed, the metal clips on the side of the head can be tapped downward so that they rest on top of the Teflon Glides.

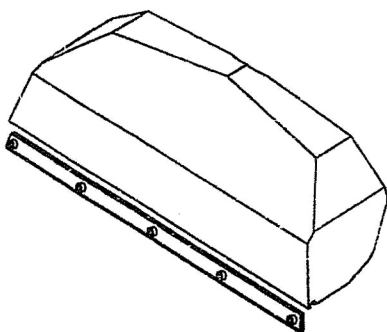

#1: Install Metal Glide Mount

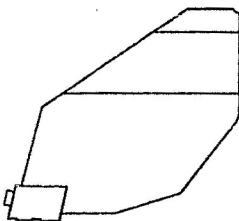

#2: Install Metal Side Clip

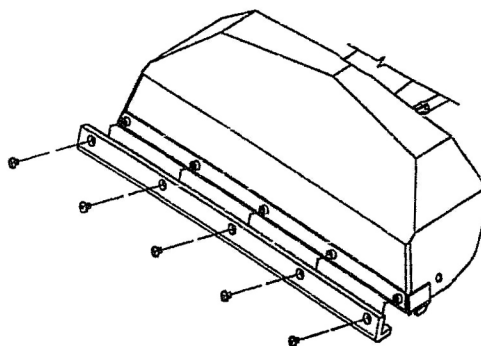

#3: Install Teflon Glide, & Screws



www.pmftools.com

ph.1-800-992-9263

fax:1-800-966-9005

8888 HWY 66, KLAMATH FALLS, OR 97601